


3-Tier Bakery Case

Instruction & Specification Sheet for Models BAK2944, BK021, BK023

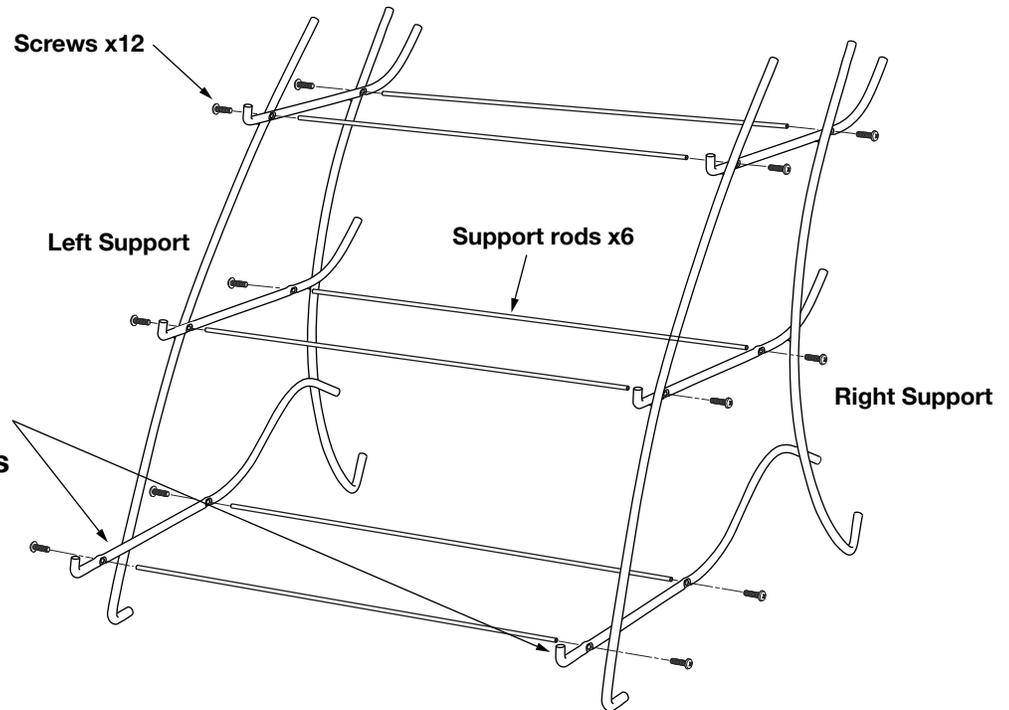

Note: When assembling, make sure that both the left and right support cross bars are facing inward.

BEFORE YOU BEGIN

Be sure to read all the instructions before using the 3-Tier Bakery Case.

- Carefully remove all parts from the carton and inspect each part. If a part appears to be damaged or missing, please contact Rosseto Customer Service.
- Store these instructions for future reference.

CARING FOR THE BAKERY CASE

Keep your Bakery Case in good working order with these cleaning and handling tips:

- **DO NOT PLACE ACRYLIC BAKERY CASE OR METAL WIRE FRAMES IN A DISHWASHER.**
- Hand wash all acrylic parts with warm soapy water.
- Rinse and dry with clean microfiber cloth for best results.
- Do not use alcohol, ammonia, or any chemical based cleaners to clean bakery cases or frame.
- Do not use abrasive materials such as scrapers or metal based brushes on clean bakery cases or frame.
- Store in a dry and well-ventilated location when not in use.


3-Tier Bakery Case

Model	Description
BAK2944	Three-Tier Clear Acrylic Bakery Display Case With Chrome Plated Wire Stand
BK021	Three-Tier Clear Acrylic Bakery Display Case With Brass Metal Wire Stand
BK023	Three-Tier Clear Acrylic Bakery Display Case With Bronze Metal Wire Stand

Dimensions	Weight
15.75" x 21.9" x 19.25" (40 x 55.63 x 48.9 cm)	21 lbs. (9.53 kg)

Replacement Parts

Item Number	Description
BAKST2248	Clear acrylic bakery case

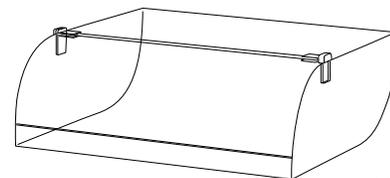

Dimensions	Weight
15" x 12.75" x 5.25" (38.1 x 32.4 x 13.3 cm)	5.1 lbs. (2.31 kg)

NEED ASSISTANCE?

Customer Service Support: **847-763-1215**

Address: **3714 Jarvis Avenue Skokie, IL 60076**

Website: **www.rosseto.com**

