


## 3-TIER CLEAR ACRYLIC BAKERY DISPLAY (BK010/BK011/BK017)

Showcase your delicious baked goods in all their mouth-watering glory in this elegant 3-Tier Bakery Display. This item is designed not only to keep your pastries fresh, but also to keep your guests coming back for more!

### PARTS

This product includes:

- A. 3 Clear Acrylic Bakery Cases (#BAKST2248)
- B. 1 Frame - Steel, Black, or Bronze

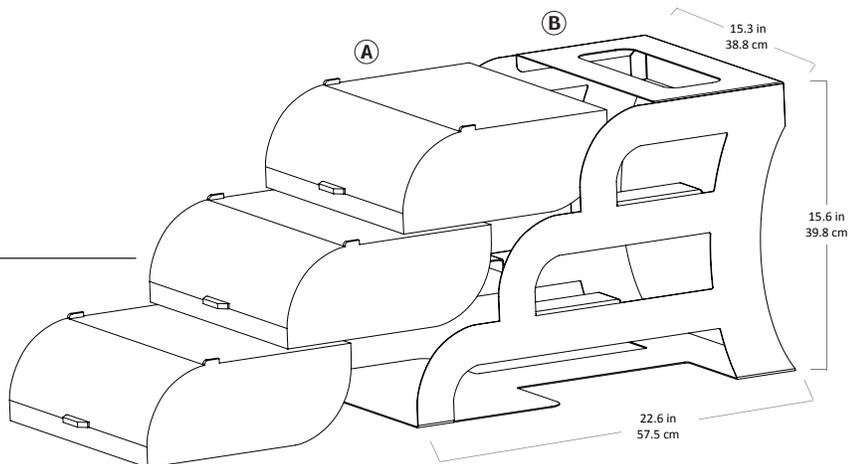

### PACKAGING

To remove your Bakery Display from the carton, follow these simple steps:

1. Firmly hold the box in place.
2. While holding the back part of the frame for support, carefully lift the item from the box using the handle provided.
3. After clearing away the bubble wrap, carefully remove each acrylic tier from the metal frame.
4. Peel off all plastic wrapping and protective film.
5. Place acrylic tiers back into the metal frame. Be sure to put the top bin in first!

Voila! Your Bakery Display is now ready for use!

### CARE INSTRUCTIONS

Keep your Bakery Display looking like new with these cleaning and handling tips:

- Do not place any part of your Bakery Display in the dishwasher.
  - Avoid using alcohol, ammonia, or any chemical-based cleaners.
  - Do not use abrasive materials such as scrapers or metal-based brushes.
  - Handwash all acrylic parts with warm soapy water. Rinse and dry with a soft cloth for best results.
  - Use a damp wash cloth to clean the metal frame; simple microfiber cloth is recommended.
- Fingerprints, dirt and oil will come off easily with soap and water.
- Stow the parts of your Bakery Display separately in the boxes that they came in to keep them protected.



**NEED ASSISTANCE?**

Please contact our customer support at (847)763-1215 and we'll be happy to assist with any assembly questions, comments or concerns.

**ROSSETO®** 3714 Jarvis Avenue, Skokie, IL 60076  
Visit our website at: [www.rosseto.com](http://www.rosseto.com)