

Roll Top Chafer

Instruction & Specification Sheet for WM6801-BK and WM6803-BK

BEFORE YOU BEGIN

Be sure to read all the instructions before attempting to use your new chafer. Proper care and maintenance will extend the life of the chafer. **Save these instructions for future reference.**

- Carefully unpack and inspect all parts. If a part appears to be damaged or missing, please contact Rosseto Customer Service.
- Handle all parts carefully when moving, storing or cleaning to avoid damage. Be sure to follow the Care and Cleaning instructions.

IMPORTANT NOTE: Black-finished chafers can be easily damaged if not handled carefully. The black painted surfaces are prone to chipping, flaking, or peeling under certain conditions, and when used in high-traffic areas due to impact and handling.

PARTS DESCRIPTION

WM6801-BK Roll Top Matte Black Rectangular Chafer with 9.51 Qt/ 9L Food Pan

WM6803-BK Roll Top Matte Black Round Chafer with 6.34 Qt/ 6L Food Pan



WM6801-BK



WM6803-BK

ACCESSORIES

SMM015 Rectangular Food Pan, 9.51 Qt/ 9L

SMM063 Round Food Pan, 6.34 Qt/ 6L

SM194 Stainless Steel Fuel Holders Set of 3



SMM015



SMM063




SM194

HANDLE INSTALLATION

The handle is packed in a separate cardboard box along with the Fuel Holders.

1. Pull up cover slightly to reveal two holes in cover where handle attaches.
2. Using a phillips screwdriver, (not included) attach the handle using the provided screws.

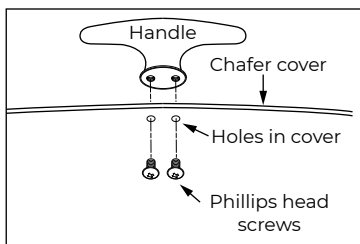

GENERAL INSTRUCTIONS

1. Always use the Chafer on a flat, stable surface.
2. Add 3/4" – 1-1/2" of hot water to the pot.
3. Check the water level by lowering the empty Food Pan until it touches the bottom of the Chafer. Adjust the water level as needed.
Do not use the Chafer without water.
4. Use disposable gloves while handling the Chafer and Food Pan to avoid leaving fingerprints.

NEVER use the food pans directly with gas/sterno (direct flame).

CARE AND CLEANING

Chafer and Food Pans*

- **DO NOT** put the Chafer through dishwasher or dryer machine. ALWAYS use a soft cloth on the Chafer to avoid scratching the surface.
 - **DO NOT** use any abrasive materials such as scrapers or metal-based brushes. Non-metal scouring pads can be used for cleaning the Food Pan.
 - **DO NOT** use harsh chemicals or abrasive cleaners.
1. Start cleaning using lukewarm water and a soft cloth. If you cannot remove stubborn food stains with water alone, use dish soap or mild detergent along with the water.
 2. Finish by wiping with a dry microfiber cloth. Store in a dry and well-ventilated location.
- * Food Pans can also be placed in a dishwasher.

SPECIFICATIONS

Model	Dimensions	Weight
WM6801-BK Rectangular Chafer	25" x 17" x 17" (63.5 x 43.2 x 43.2 cm)	25 Lbs. (11.34 Kg)
WM6803-BK Round Chafer	18.75" x 18.75" x 18.5" (47.63 x 47.63 x 47 cm)	18.5 Lbs. (8.39 Kg)
SMM015 Rectangular Food Pan	20.9" x 12.8" x 2.6" (53.1 x 32.5 x 6.6 cm)	1.8 Lbs. (0.82 Kg)
SMM063 Round Food Pan	13.75" x 2.5" (34.9 x 6.4 cm)	1 Lbs. (0.45 Kg)
SM194 Stainless Steel Fuel Holders St/3	3.5" x 6.3" x 2.4" (8.9 x 16 x 6.1 cm)	.2 Lb. ea. (0.10 Kg ea.)

NEED ASSISTANCE?

Customer Service Support: **847-763-1215**

Address: **3714 Jarvis Avenue Skokie, IL 60076**

Website: **www.rosseto.com**

