

## Avant Guarde<sup>™</sup> Sneeze Guards

Instruction & Specification Sheet

a

Patent Pending

R3 05142020


## SETTING UP YOUR PRODUCT

- Carefully remove all parts from packaging.
- Make sure you have all parts listed:
  a. 1 acrylic panel
  - b. 2-4 feet (depending on model)
- Assemble product by sliding feet into the slots at the bottom of the panel.
- 4. Place sneeze guard on flat, stable surface.

## SPECIFICATIONS

Material: 0.24IN Clear Acrylic			
ltem	Dimension	Window Dimension	Replacement
Number	W x D x H (IN)	W x H (IN)	Foot
AG001	24x4.7x15.5	n/a	AGF001
AG002		16x5	
AG003	36x4.7x15.5	n/a	
AG004		28x5	
AG005	48x4.7x15.5	n/a	
AG006		32x5	
AG007	24x8x28	n/a	AGF002
AG008		16x6.5	
AG009	36x8x28	n/a	
AG010		28x6.5	
AG011	48x8x28	n/a	
AG012		32x6.5	
AG013*	48x10x28	32x6.5 (Door: 24x15)	
AG014	24x10x40	n/a	AGF003
AG015		16x6.5	
AG016	36x10x40	n/a	
AG017		28x6.5	
AG018	48x10x40	n/a	
AG019		32x6.5	
AG020*		32x6.5 (Door: 24x15)	



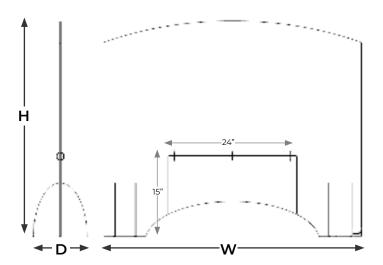

## **CLEANING & CARE INSTRUCTIONS**

To maintain the quality of your sneeze guard, wash all parts in warm water with a mild soap. Rinse thoroughly with clean, cold water. Dry with a soft sponge or cloth to prevent water spots.

- DO NOT put any part of the unit through dishwasher or dryer machine.
- DO NOT use any abrasive materials such as scrapers or metal-based brushes.
- DO NOT use harsh chemicals or abrasive cleaners.

NEED ASSISTANCE?

Customer Service Support: 847-763-1215

Address: 3714 Jarvis Avenue Skokie, IL 60076

Website: www.rosseto.com