

SETTING UP YOUR PRODUCT

- Carefully remove all parts from packaging.
- Make sure you have all parts listed:
 - 1 acrylic panel
 - 2 acrylic feet
- Assemble product by sliding feet into the slots at the bottom of the panel.
- Place sneeze guard on flat, stable surface.
- For a 6" tall pass through place the feet in the inside slots on the acrylic panel. For a 12" tall pass through, place the feet in the outside slots on the acrylic panel.



For a 6" tall pass through window, place feet in the outer slots.




For a 12" tall pass through window, place feet in the inner slots.

SPECIFICATIONS

Material: 0.25 IN Clear Acrylic

Item Number	Dimension W x D x H (IN)	Window Dimension W x H (IN)
AG022	36x10x33.5 or 36x10x39.5	31.6x6 or 27.7x12
AG023	48x10x33.5 or 48x10x39.5	43.6x6 or 39x12

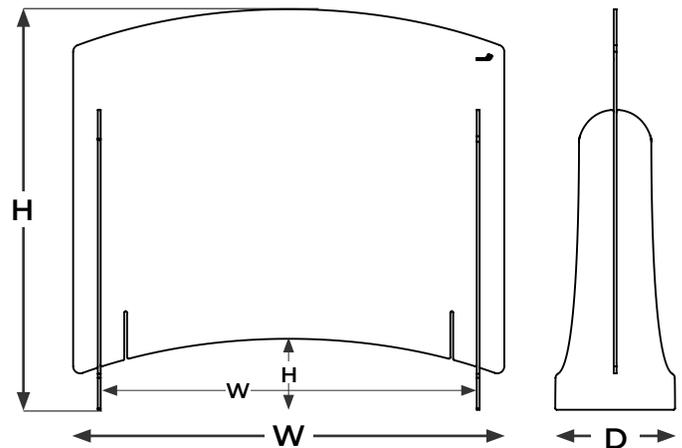

CLEANING & CARE INSTRUCTIONS

To maintain the quality of your sneeze guard, wash all parts in warm water with a mild soap. Rinse thoroughly with clean, cold water. Dry with a soft sponge or cloth to prevent water spots.

- DO NOT put any part of the unit through dishwasher or dryer machine.
- DO NOT use any abrasive materials such as scrapers or metal-based brushes.
- DO NOT use harsh chemicals or abrasive cleaners.

IS064 R1 10062020

NEED ASSISTANCE?

Customer Service Support: **847-763-1215**

Address: **3714 Jarvis Avenue Skokie, IL 60076**

Website: **www.rosseto.com**

