


SETTING UP YOUR PRODUCT


- Carefully remove all parts from packaging.
- Make sure you have all parts listed:
 - 3 acrylic panels
 - 4 plastic feet with tape
- Assemble product by sliding the front panel (a) into the side panels (b).
- Place plastic feet on the side panels (c).
- Clean desk surface and let dry completely. Remove film from tape on the bottom of the feet and place in desired location.

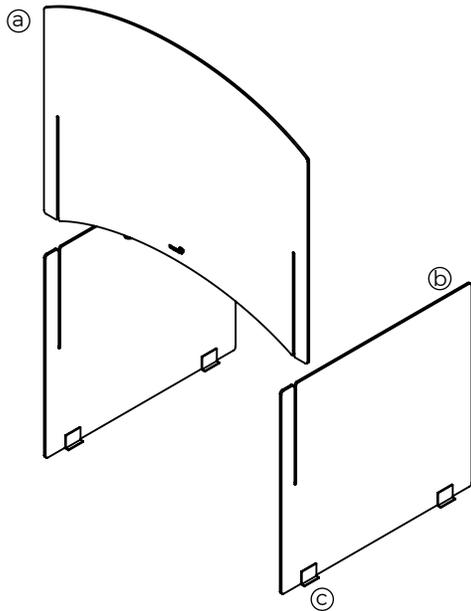

SPECIFICATIONS

Material: 0.16 IN Clear Acrylic

Item Number	Dimension W x D x H (IN)	Side Panel Height (IN)	Window Dimension W x H (IN)
AG024	24x17.3x19	16	21x2.25

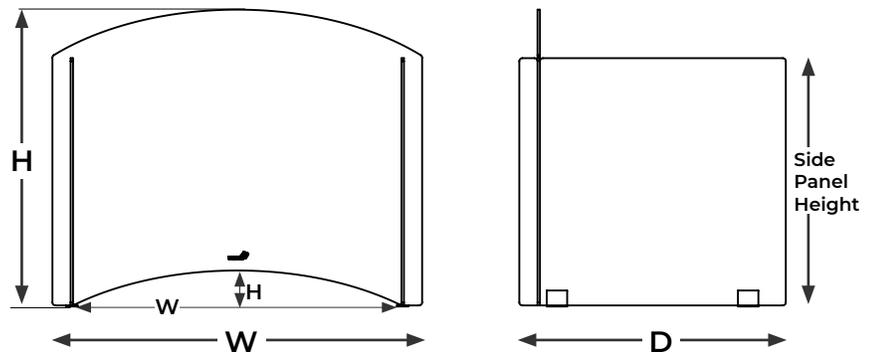

CLEANING & CARE INSTRUCTIONS

To maintain the quality of your sneeze guard, wash all parts in warm water with a mild soap. Rinse thoroughly with clean, cold water. Dry with a soft sponge or cloth to prevent water spots.

- DO NOT put any part of the unit through dishwasher or dryer machine.
- DO NOT use any abrasive materials such as scrapers or metal-based brushes.
- DO NOT use harsh chemicals or abrasive cleaners.

ISO65 R1 10062020

NEED ASSISTANCE?

Customer Service Support: **847-763-1215**

Address: **3714 Jarvis Avenue Skokie, IL 60076**

Website: **www.rosseto.com**

