

**Assembly Instructions:**  
**EZ Multi-Cone 1W/2W/3W/4W/5W**


# Get to know your Dispenser

Your new EZ Multi-Cone Dispenser comes with **3 easily interchangeable** portion wheels delivering just the right amount of product every time.

Changing your portion wheel is an easy **3-step process** (see page 4). Test each wheel with your dry foods to determine which works best for you!


Here are some quick guidelines to explain how the different wheels work:

1. The **6W** is great for dispensing **larger** items such as, medium grind cookies like **Oreos, Cereals & Granolas, Trail Mix, M&Ms, Coffee Beans** and most kinds of dry foods.

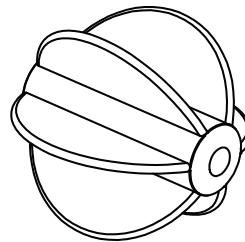


**1 oz.**

2. The **6SM** is perfect for **medium** items such as, **Chopped Nuts, Mini Chocolate Chips, Crushed M&Ms,** and **Wonka Nerds....etc.**

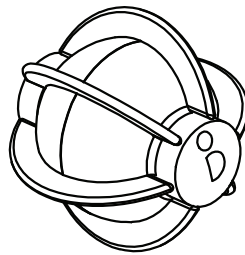

**1 Tbsp.**

3. If you're looking for precision, the **1 teaspoon Scoop-It™ wheel** delivers Rosseto's best measurement. The Patent-Pending Scoop-It™ wheel is ideal for **smaller** items such as, **Sprinkles, Crushed Peanuts** and **Almonds, Coffee, Sugar** and **Spices**

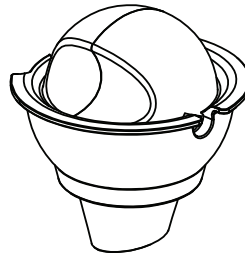

**1 Tsp.**







Need a different sized portion wheel?  
We have 4 more options for you to choose from.  
Please call us: **847.763.1215**


# Assembly Instructions for EZ Multi-Cone 1W/2W/3W/4W/5W Unit:

\*\*\* Each Multi-Cone Container will come assembled with 1 of the 3 Paddle Wheels described below.

The remaining parts will come separately inside container's packaging.


1. Carefully remove all parts from packaging and poly bags:
  - 1- Multi-Cone Wall Mounted Adapter
  - 1,2,3,4 or 5 120mm Multi-Cone Containers, Each Comes with:
    - I. MC Lid(1)
    - II. 6WR PRO Silicon Paddle Wheel (2)
    - III. PRO6SM Silicon Paddle Wheel (3)
    - IV. EZP007 – 1 Teaspoon Scoop-It Wheel & Silicon Funnel (4)
    - V. MC Container (5)
    - VI. MC Label Holder (6)
    - VII. MC Steel Handle (7)
    - VIII. MC Handle Clip (8)
2. Make sure you have all parts above before discarding packaging
3. Mount Multi-Cone Wall Mounted Adapter where desired, making sure it is affixed securely to wall (mounting hardware not included). See bracket + sizes below
4. Attach MC Label Holder (6) to bracket as pictured (fig. A)
5. Begin with handle facing you. Rotate container to the left 45°. Insert container into Multi-Cone Wall Bracket at a 45° angle to ensure container fits around label holder as pictured (fig. B). Make sure to clear handle first before inserting the rest of the container.
  - Back of container has small key that aligns with bracket notch to prevent movement from side to side.
6. Repeat step 5 for the remaining containers
7. Fill containers with desired dry product
8. Place all lids on each corresponding container
9. Dispense as you please!

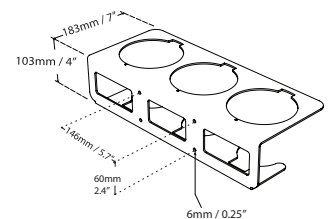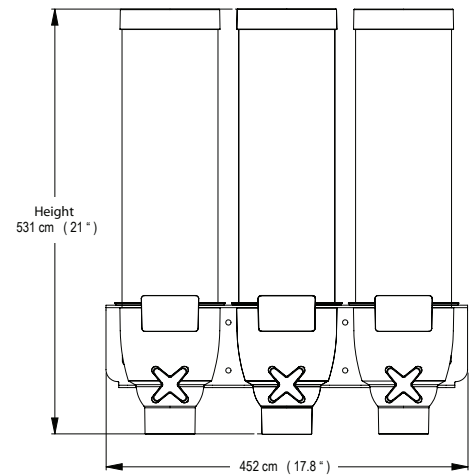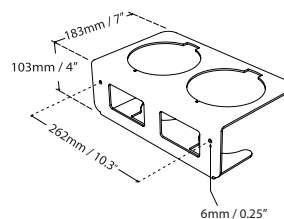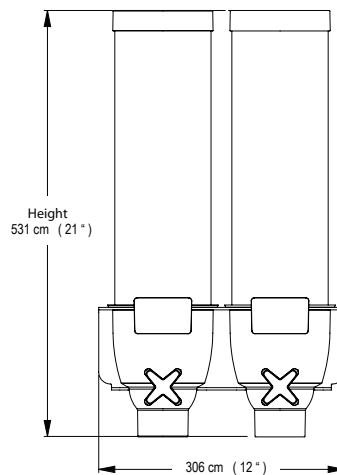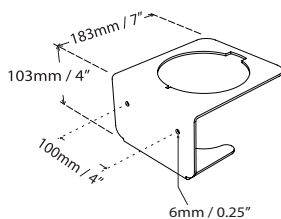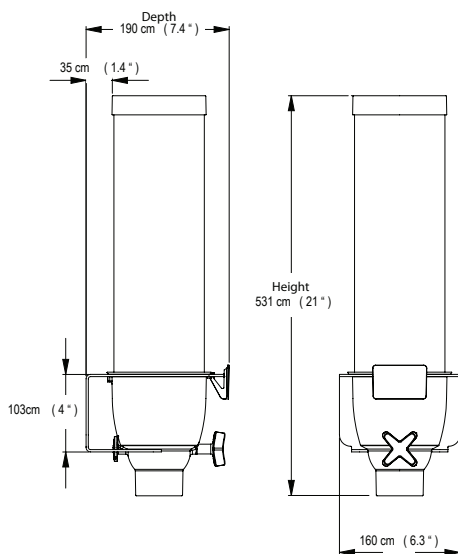

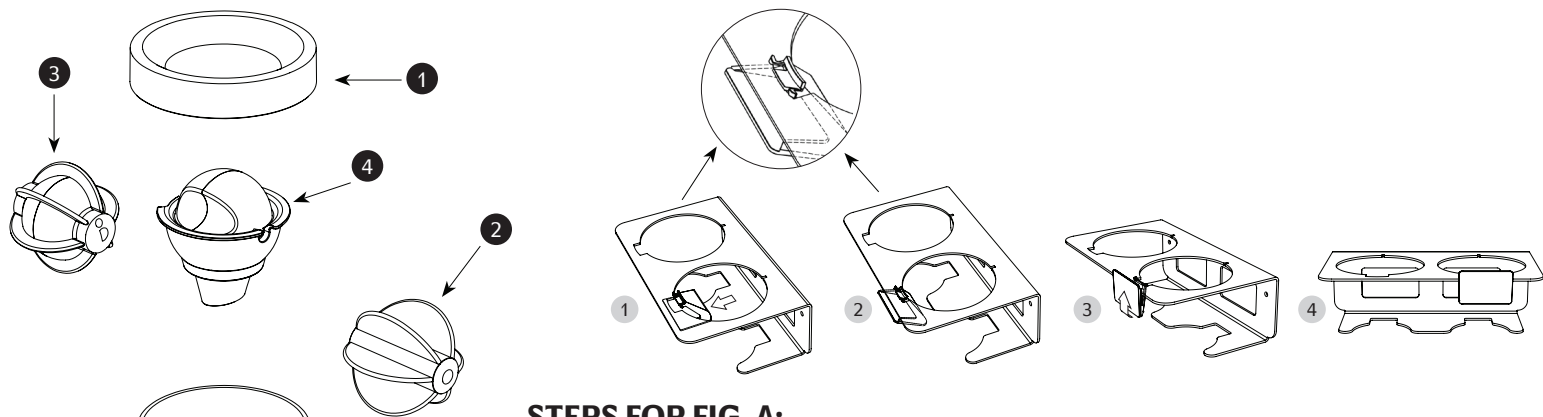





#### STEPS FOR FIG. A:

1. Hold MC Label Holder horizontally beneath the bracket
2. Slide forward into slot with 2 small wings hanging over the top of the bracket
3. Lift MC Label Holder over the front of the bracket until it "clicks" into place
4. Apply desired label to the MC Label Holder

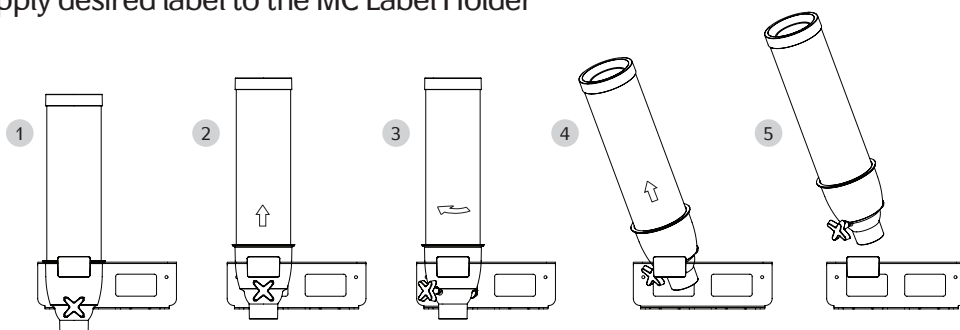

#### STEPS FOR FIG B:

1. Select container to be removed
2. Lift container 1-2 Inches straight up
3. Twist container to the left 45°
4. Tilt container at a 45° angle towards the corner of the bracket
5. Carefully lift container until it's clear from the bracket

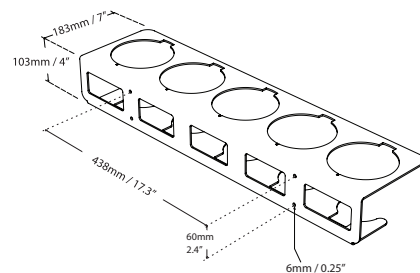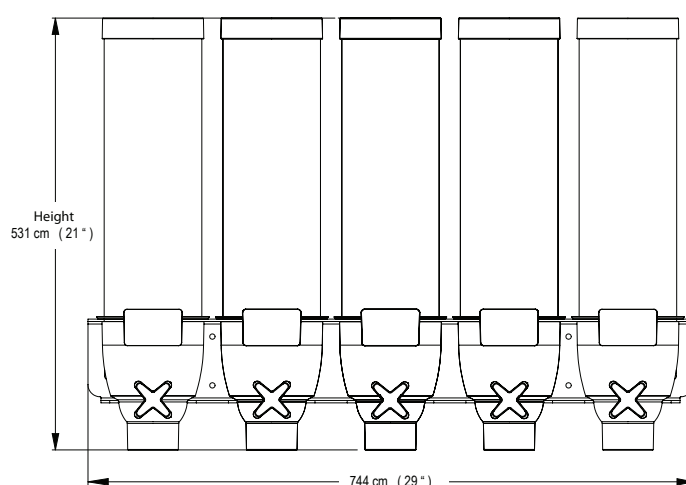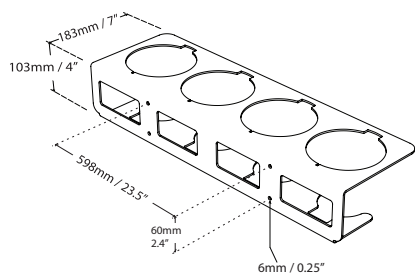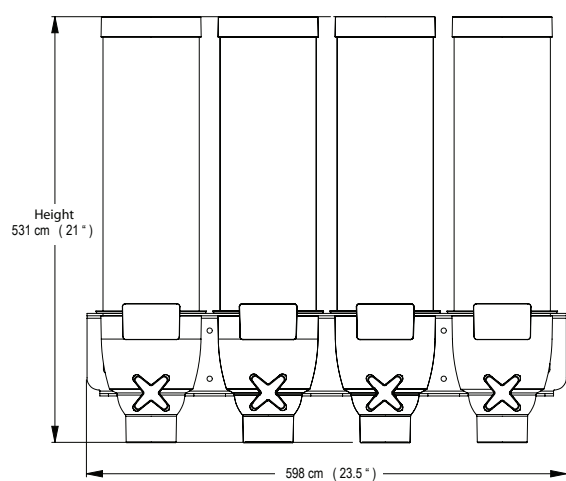

### **Cleaning Instructions:**

- 1) Gently disassemble all parts of unit as indicated below
- 2) Wash all parts in warm soapy water (never use abrasive sponge or cloth)
- 3) Reassemble unit only after all parts are completely dry (see assembly instructions below)

### **Multi-Cone Container Disassembly (Please use image & part #'s on reverse side as guide):**

- 1) Carefully remove Multi-Cone Container from Multi-Cone Wall Bracket at a 45° angle as pictured on reverse (fig. B)
- 2) Remove MC Lid (1) from top of Container plus any remaining product
- 3) Remove MC Handle Clip (8) from MC Handle (7) at the back of container
- 4) Gently remove MC handle from the front of the container
- 5) Reach into container and remove paddle wheel (2,3 or 4) by gently pulling upwards or turning container upside down
- 6) Disassembly Complete!

### **Multi-Cone Container Assembly:**

- 1) Before assembling, choose preferred paddle wheel for your specific application
- 2) Place paddle wheel (2,3 or 4) into container, making sure the holes of the paddle wheel align with the container's holes
- 3) Insert handle through front of container making sure to push through paddle wheel and through the back of the container
- 4) Place MC Handle Clip (8) on back end of Handle shaft (make sure the words "This side out" are facing out)
- 5) Fill container with desired dry product and place MC Lid (1) on Container
- 6) With handle facing you, insert container into Multi-Cone Wall Bracket at a 45° Angle to ensure container fits around Label holder as pictured on reverse (fig. B).
  - a. Back of Container has small key that aligns with bracket notch to prevent movement from side to side.
- 7) Dispense As You Please!

### **How to Interchange Paddle Wheels:**

#### **REMOVE:**

- 1) Remove MC handle Clip from back of container.
- 2) Pull MC Steel Handle out through front of container.
- 3) Remove Paddle Wheel

#### **INSERT:**

- 1) Place preferred Paddle Wheel into container; making sure the holes of the paddle wheel align with the container's holes.
- 2) Insert handle through front of the container, making sure to push through paddle wheel, and the back of the container.
- 3) Place MC Handle Clip (8) on back end of handle shaft (make sure the words "This side out" are facing out).

### **NEED ASSISTANCE?**

Please contact our customer support at (847)763-1215 and we'll be happy to assist with any assembly questions, comments or concerns.

ROSSETO® 3600 West Pratt Ave. Lincolnwood, IL 60712

