


# **INFUSION BEVERAGE DISPENSER**

Models: LD150, LD154, LD155, LD156


US Patent: D801,744



2 INFUSION CHAMBER



(3) CHAMBER HOLDER



(4) FAUCET



Before first use, make sure to hand wash all components of the beverage dispenser in warm soapy water. This dispenser is **not** dishwasher safe! For best results, use filtered or bottled water in dispenser.

Your Beverage Dispenser includes the following parts:

|   | Item No. | Description   |
|---|----------|---|
| 1 | LDL005   | Lid for 3 Gal. White Infusion Beverage Dispenser            |
|   | LDL006   | Lid for 3 Gal. Black Infusion Beverage Dispenser            |
|   | LDL007   | Lid for 5 Gal. White Infusion Beverage Dispenser            |
|   | LDL008   | Lid for 5 Gal. Black Infusion Beverage Dispenser            |
|   |          |   |
| 2 | LDF005   | Chamber for 3/5 Gal. White Infusion Beverage Dispenser      |
|   | LDF007   | Chamber for 3/5 Gal. Black Infusion Beverage Dispenser      |
|   |          |   |
| 3 | LDF006   | Chamber Holder for 3 Gal. White Infusion Beverage Dispenser |
|   | LDF008   | Chamber Holder for 3 Gal. Black Infusion Beverage Dispenser |
|   | LDF009   | Chamber Holder for 5 Gal. White Infusion Beverage Dispenser |
|   | LDF010   | Chamber Holder for 5 Gal. Black Infusion Beverage Dispenser |
|   |          |   |
| 4 | LDM006   | Stainless Steel Faucet                                      |
|   |          |   |

Dimensions: (IN) 8.3" x 8.3" x 22.0" - (CM) 21.08 x 21.08 x 55.88 (3 gal)

Dimensions: (IN) 13.5" x 8.5" x 22" - (CM) 34.29 x 21.59 x 55.88 ( 5 gal)

Capacity:

With Infusion Chamber: 3 Gallons / 11.4 Liters With Infusion Chamber: 5 Gallons / 18.9 Liters

#### RECOMENDED ACCESSORY

DRIP TRAY (LD108):

Made of stainless steel and acrylic parts, the drip tray complements the beverage dispenser in stylistic and operational aspects. Placed directly under the beverage dispenser faucet, the drip tray serves as a catch basin for minor spills.





Please contact our customer service support at (847) 763-1215 and we'll be happy to assist with any assembly questions, comments, or concerns.



# INFUSION BEVERAGE DISPENSER

# HOW TO CARE FOR YOUR ROSSETO BEVERAGE DISPENSER

Keep your beverage dispenser in good working order with these cleaning and handling tips

- Do not place any part of your beverage dispenser in the freezer or dishwasher
- Hand wash all acrylic parts with warm soapy water. Rinse and dry with soft cloth for best results
- Do not use alcohol, ammonia, or any chemical based cleaners to clean dispenser
- Do not use abrasive materials such as scrapers or metal based brushes on dispenser
- ONLY use this product for cold liquids


### DO NOT USE HOT LIQUIDS WITH THIS BEVERAGE DISPENSER




BONNET

**SPRING** 

**STEM** 

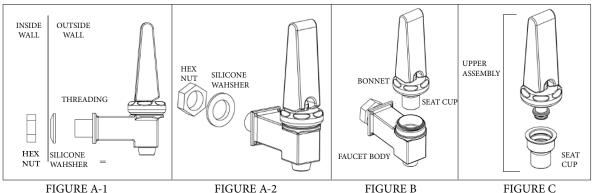



**DISASSEMBLY** 

- 1. Detach faucet from dispenser by unscrewing hex nut from inside tank (Figures A-1 & A-2).
- 2. Pull out faucet body and silicone washer from front, retrieve hex nut from inside tank.
- 3. Detach upper assembly from faucet body by unscrewing bonnet (Figure B). Once the upper assembly is separated from the faucet body, pull seat cup away from handle/bonnet (Figure C). NOTE: If seat cup remains in faucet body after it was detached from the upper assembly, remove seat cup from faucet body.
- 4. Clean all parts in warm soapy water.

### **ASSEMBLY**

- 1. Place seat cup over stem/spring on upper assembly. Securely lock the stem into the base of the seat cup. You will know when the seat cup is securely locked in place when it will not detach from stem easily.
- 2. Hand tighten upper assembly/bonnet onto faucet body. You will know that the bonnet is properly installed if no threading is seen on the faucet body.
- 3. Install the faucet body onto body of dispenser. Place silicone washer over threading of faucet body MAKING SURE SILICONE WASHER IS FLUSH WITH BACK OF FAUCET BODY (Figures A-1 & A-2).
- 4. With one hand, place threading of faucet body through hole in front of the dispenser. With the other hand, screw the hex nut onto the faucet from the inside of dispenser to secure. Hand tighten only
- 5. Fill container at location of dispensing. Drain dispenser at the end of the day before moving. If full, 2 people are required to move dispenser



Please contact our customer service support at (847) 763-1215 and we'll be happy to assist with any assembly questions, comments, or concerns.

ROSSETO® 3714 Jarvis Avenue. Skokie, IL 60076 Visit our website at www.rosseto.com